

## INSTRUCTIONS


#GRG / #GRG-NSH-N-NA

### GRIP REMOVER GUN

- 1** Always wear safety glasses.
- 2** Remove the pump assembly from the Grip Remover Gun canister and add solvent. Replace the pump assembly. Occasionally, the gun may need to be primed by pinching the needle with a cloth and pumping the gun a few times until liquid comes out of needle.
- 3** The Grip Remover Gun works best with HF100. You may also use mineral spirits or naphtha solvents. The use of Perchloroethylene will damage the gaskets and seals, therefore it is not recommended.
- 4** Penetrate needle through sidewall of grip and pump enough fluid to loosen grip for removal.



#GRG

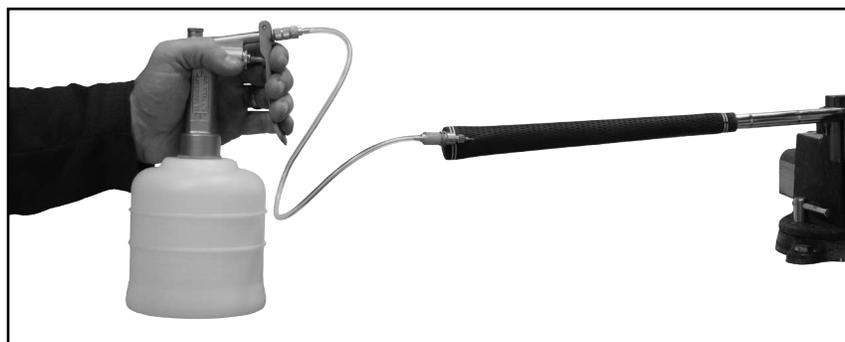

#GRG-NSH-N-NA

### MAINTENANCE

If the sprayer should stop functioning, tap the back of the pump assembly several times. This will jar the ball checks loose. A slight film or deposit can collect around the ball checks due to the type of liquid used.

If the ball checks become dry, there may be a need to clean the pump assembly. It is recommended to pump denatured alcohol through the pump hose to free the pump assembly of any film or deposits.