

INSTRUCTIONS

#AM-LS

STEELCLUB® IRONS ANGLE MACHINE*Replacing Loft Scale*

- 1** Remove old Loft Scale. Clean surface thoroughly with acetone.
- 2** Using a 90° Angle Square, set the Vertical Plate so that it is 90° or square to the base plate.
- 3** Install New Loft Scale. Position it so that the 36° Line is even with the leading edge of the white painted area of the Vertical Plate.
- 4** Use "goop" brand silicon sealant at the ends of the scale. This will protect the scale ends.

