


# INSTRUCTIONS

#SGSPPP

## STEELCLUB® GRAPHITE SHAFT PULLER

*Pro Plus Model*

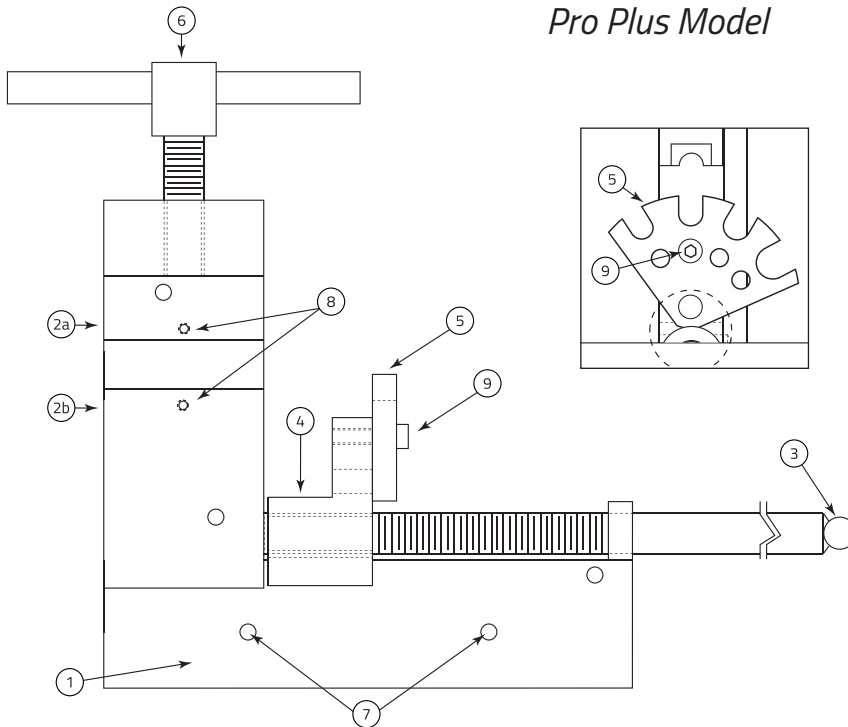

### PARTS

1. Bench Mount
- 2a. Top Shaft Clamp
- 2b. Bottom Shaft Clamp
3. Hosel Stop Handle
4. Hosel Stop Guide
5. Hosel Stop (Selectable)
6. Shaft Clamp T-Handle
7. Roll Pins
8. Shaft Clamp Screws
9. Hosel Stop Screw

### MAINTENANCE

Your Pro Plus Model Graphite Shaft Puller has been shipped to you with a thin coating of axle grease on the threaded rods. It is recommended that these areas be lubricated periodically to prevent wear. Occasionally clean rest of puller with WD40.

- 1** Secure your Pro Plus Model Graphite Shaft Puller in a vise. Set the Roll Pins (#7) of Vise Plate (#1) on top of vise jaws.
- 2** Turn the Shaft Clamp T-Handle (#6) counter clockwise to raise the Top Shaft Clamp (#2a). **NOTE:** Rubber used in the clamp protects and grips shaft for removal. No other protection is required.
- 3** Turn Hosel Stop T-Handle (#3) counter clockwise until the Hosel Stop Guide (#4) touches the Bottom Shaft Clamp (#2b). **NOTE:** Do not over tighten.
- 4** Selecting hosel stop: Remove Hosel Stop Screw (#8) and rotate hosel stop so that the correct diameter is in line with shaft clamps. Re-install hosel stop screw.
- 5** CUT OFF FERRULE before placing the golf club in your Pro Plus Model Graphite Shaft Puller.
- 6** Place shaft into the Bottom Shaft Clamp (#2b) with club head hosel against Hosel Stop (#5). Turn the Shaft Clamp T-Handle (#6) clockwise to tighten the Top Shaft Clamp (#2a) down on the golf club shaft. **NOTE:** Do not over tighten. Shafts can be crushed.
- 7** Turn Hosel Stop T-Handle (#3) slightly until Hosel Stop (#5) is tight against club head hosel. Apply heat evenly around hosel until epoxy bond is broken. **NOTE:** On bore thru metal woods, it may be necessary to heat hosel for a few seconds, let heat conduct for a few minutes, then reheat. You may have to repeat this process a few times in order to prevent burning the finish on the club head. **IMPORTANT:** You must apply enough heat to break the epoxy bond or the club head will not pull off.
- 8** Turn the Hosel Stop T-Handle (#3) clockwise to pull club head from shaft. Hold the club head with your free hand so that it does not fall off the shaft. **NOTE:** Do not touch the hosel. Use glove to protect hand.

**ATTENTION:** Do not use puller to remove steel shafts. Heat will conduct up the steel shaft and damage the rubber clamps.