


TOURGAUGE® Swing Weight Scale

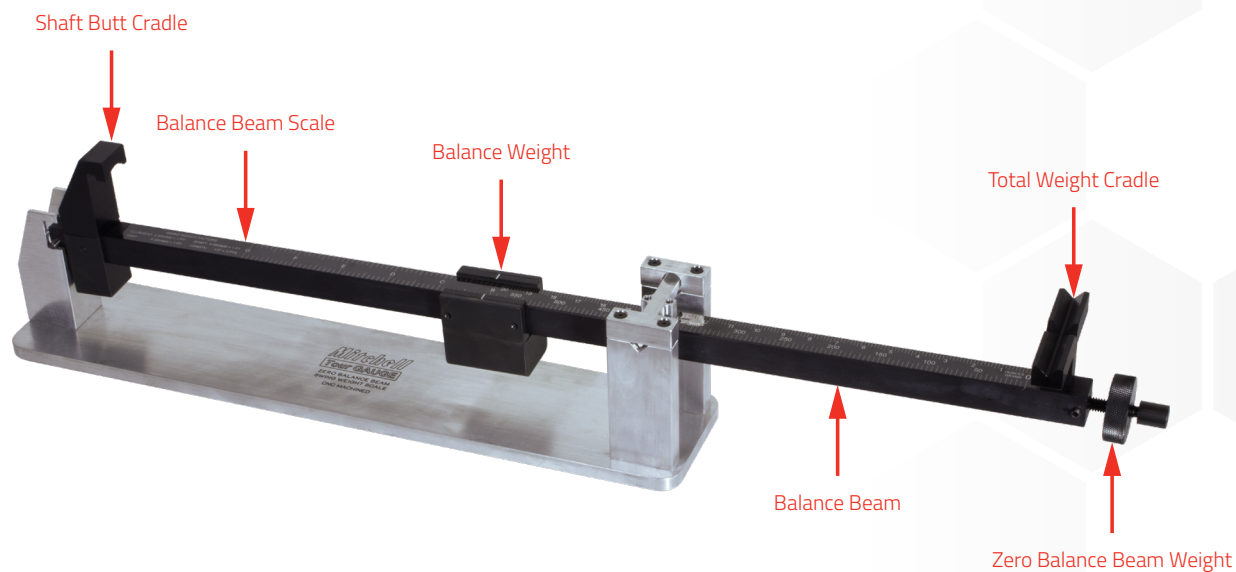

Operating Instructions

STEP 1

Position **Balance Weight** at zero on **Balance Beam Scale**. Adjust **Zero Balance Beam Weight** until **Balance Beam** is level.

STEP 2

Position butt of club in **Shaft Butt Cradle** and adjust **Balance Weight** until **Balance Beam** is level (see fig. 1). Read corresponding swing weight.

STEP 3

Balance club to **Total Weight Cradle** and adjust **Balance Weight** until **Balance Beam** is level. Read corresponding weight in ounces or grams.

REMOVE RED CAP PRIOR TO USE

