


INSTRUCTIONS

#GS-FMS

GRIP STATION FLOOR MOUNT STAND*Mount Stand To Cement Floor*

- 1** Place stand in desired position. It is recommended to place the Grip Station in a corner of your shop.
- 2** When placing near wall allow a work area of 8 ft. deep x 4 ft. wide. The bottom base of the stand needs to be at least 29" from the back wall and 12" from either side wall (*See Diagram Below*). Make sure the two top mounting holes on the stand are facing forward.

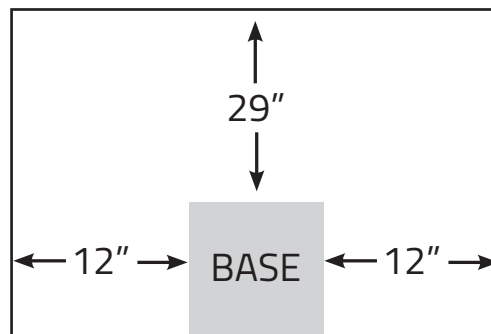

- 3** Using a 3/8" Masonry Bit, drill through the four holes in the stand base into the cement floor to mark hole locations. Remove the stand and complete drilling the four holes to a depth of 4". Use a vacuum cleaner to remove cement dust from holes.
- 4** Place stand over holes. Insert Sleeve Anchors (provided) through the holes in the base and tap them with a hammer (if necessary), until the washer is touching the base.
NOTE: Do not remove nut and washer.
- 5** Use a 1/2" wrench (DO NOT use a socket wrench) and tighten bolts, alternating until all four are secure.