


Ferrule Turning Fixture

Installation on Belt Sander/Buffer Motor or Shaft Cutting Machine

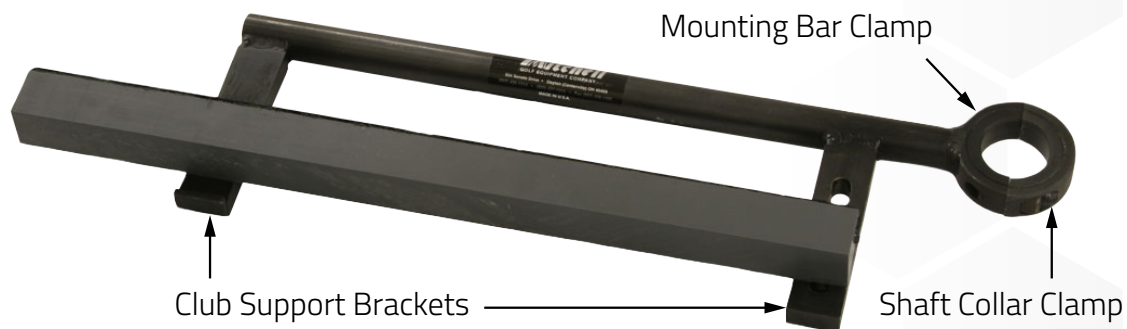

Installation Instructions

STEP 1

Loosen two bolts in **Shaft Collar Clamp** using 3/16" Allen Wrench and separate from **Mounting Bar Clamp**. Leave bolts in **Shaft Collar Clamp**.

STEP 2

Use pen to place mark 2-3/4" down from **Locking Collar** on the **Sanding Belt Adjustment Bar** (see fig. 1).

STEP 3

With **Club Support Brackets** facing forward, position **Mounting Bar Clamp** on **Sanding Belt Adjustment Bar**. Place **Shaft Collar Clamp** on **Sanding Belt Adjustment Bar** and finger tighten bolts to **Mounting Bar Clamp**.

STEP 4

Align **Mounting Bar Clamp** parallel with motor and locate at pen mark on **Sanding Belt Adjustment Bar**. Tighten bolts in **Shaft Collar Clamp** securely with 3/16" Allen Wrench.



fig. 1