

Grip Station Floor Mount Stand

Mount Stand To Cement Floor


Installation Instructions

STEP 1

Place stand in desired position. It is recommended to place the Grip Station in a corner of your shop.

STEP 2

When placing near wall allow a work area of 8 ft. deep x 4 ft. wide. The bottom base of the stand needs to be at least 29" from the back wall and 12" from either side wall (see diagram below). Make sure the two top mounting holes on the stand are facing forward.

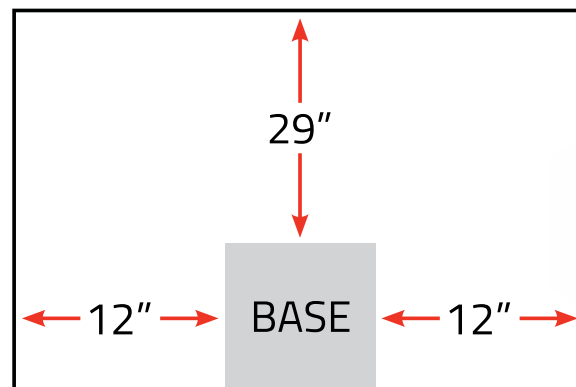

STEP 3

Using a 3/8" Masonry Bit, drill through the four holes in the stand base into the cement floor to mark hole locations. Remove the stand and complete drilling the four holes to a depth of 4". Use a vacuum cleaner to remove cement dust from holes.

STEP 4

Place stand over holes. Insert **Sleeve Anchors** (provided) through the holes in the base and tap them with a hammer (if necessary), until the washer is touching the base.

NOTE: Do not remove nut and washer.

STEP 5

Use a 9/16" wrench (**DO NOT** use a socket wrench) and tighten bolts, alternating until all four are secure.