

## STEELCLUB® Floor Mount Stand

*Mount Stand To Cement Floor*


### Installation Instructions

#### STEP 1

Place stand in desired position. It is recommended to place the Steelclub® Angle Machine on your sales floor to generate interest and create sales.

#### STEP 2

When placing near wall allow a work area of 2 ft. deep x 5 ft. wide. The bottom base of the stand needs to be at least 11" from the back wall and 26" from either side wall (see diagram below). Make sure the bending bar hooks on the stand are facing forward.

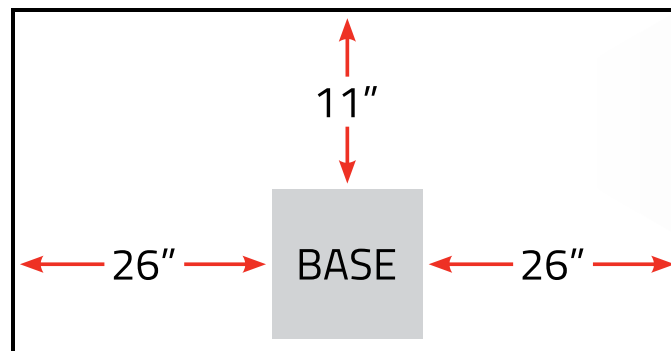

#### STEP 3

Using a 3/8" Masonry Bit, drill through the four holes in the stand base into the cement floor to mark hole locations. Remove the stand and complete drilling the four holes to a depth of 4". Use a vacuum cleaner to remove cement dust from holes.

#### STEP 4

Place stand over holes. Insert **Sleeve Anchors** (provided) through the holes in the base and tap them with a hammer (if necessary), until the washer is touching the base.

**NOTE:** Do not remove nut and washer.

#### STEP 5

Use a 9/16" wrench (**DO NOT** use a socket wrench) and tighten bolts, alternating until all four are secure.