



User Manual For:

 **STEELCLUB®**
IRONS ANGLE MACHINE



**This STEELCLUB Irons Angle Machine
Was Manufactured For:**

Purchased by: _____

Date: _____

Serial Number# _____

Thank You

Thank You for purchasing the golf industry's state-of-the-art STEELCLUB Irons Angle Machine. You should find it simple to operate. Please follow the instructions in this manual. Be sure to mount the stand into the floor and attach the machine before attempting to use it. If you have any questions, please call 1-800-437-1314.

Important Notice

Your STEELCLUB Irons Angle Machine is a precision gauge.

When measuring a particular golf club in your STEELCLUB Irons Angle Machine, the angle readings are correct. When these angle readings are compared to the published standards for that club and are found different, then that particular club does not meet those standards.

If you compare the loft/lie angles of a particular club measured in other machines to a STEELCLUB Irons Angle Machine, there may be a difference. That is because some machines do not adjust for offset, progressive offset, non-offset, or face progression hosel positions and therefore give inaccurate and inconsistent readings. You can measure any club in a STEELCLUB Irons Angle Machine accurately.

“The Industry Standard For Accuracy.”

Guarantee

All products manufactured by Mitchell Golf are guaranteed against defects and workmanship. Replacement or repair will be at the discretion of Mitchell Golf.

Table Of Contents:


- Introduction 1-2
- Table of Contents..... 4
- Package Contents..... 5-7
- Maintenance..... 8
- Customer Support 8
- Operating Instructions
 - Club Head Registration & Clamping..... 9
 - Measuring Loft/Lie Angles..... 10
 - Adjusting Loft/Lie Angles..... 11
 - Convert to Left Hand..... 12

Package Contents


This package includes the following contents:




1x Top Worm Screw

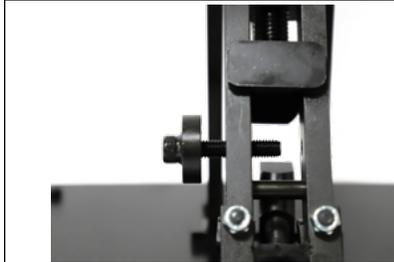

1x Face Fixture

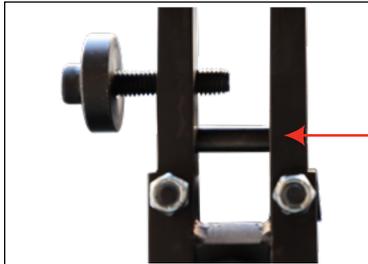





1x Horizontal Dowel Pin

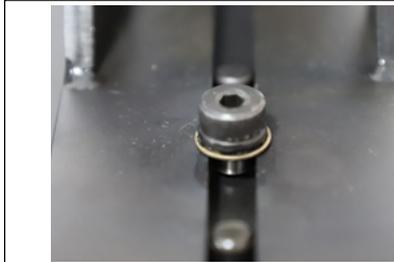

1x Tension Bolt



1x Loft/Lie Angle Gauge Assembly

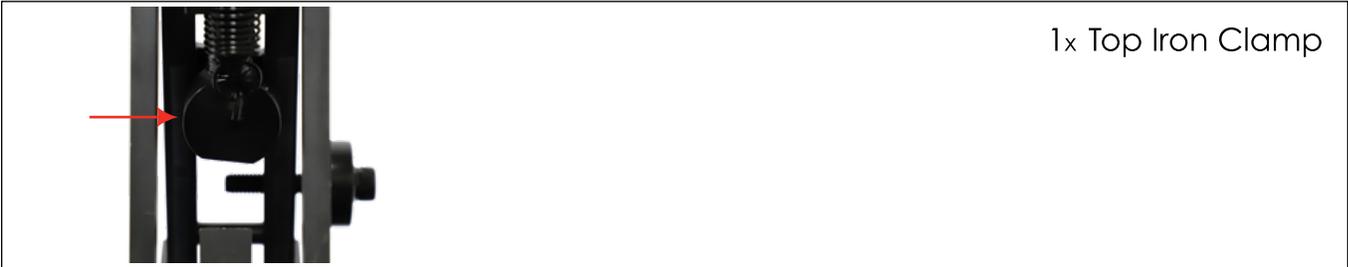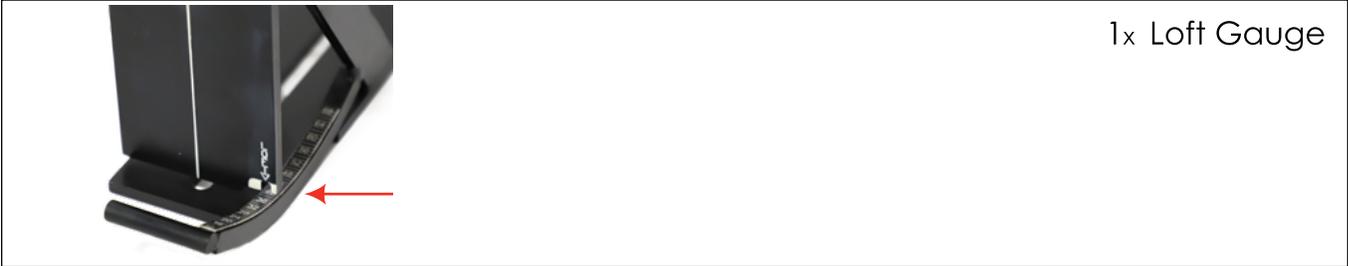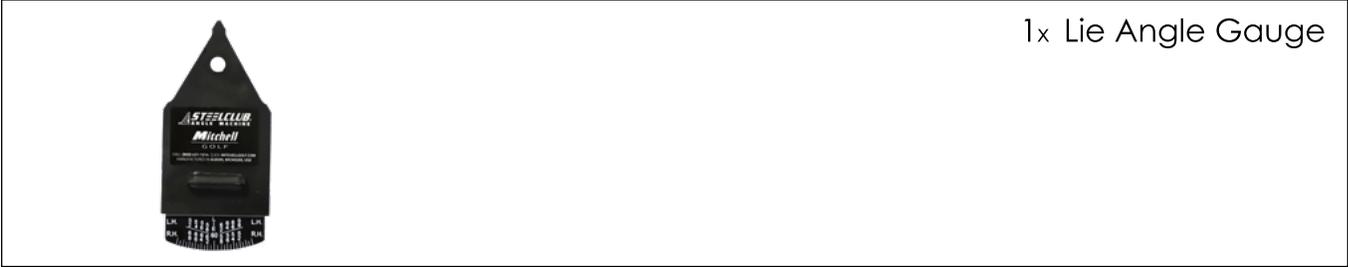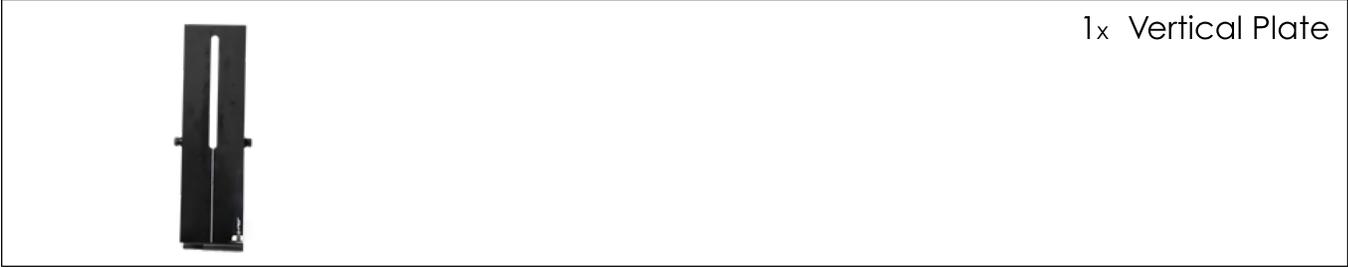




1x Back Iron Clamp



1x T-Wrench

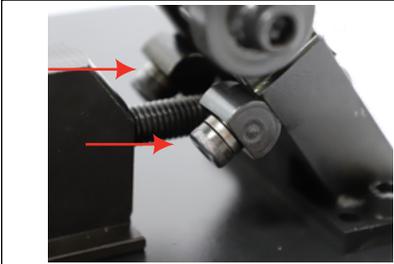

1x Iron Sole Clamps

Maintenance

STEELCLUB Irons Angle Machine

1. Clean occasionally with WD-40 to prevent corrosive build up.
2. Face Tape: As needed, clean off old tape on backside of **Face Fixture** and replace with two new pieces of tape, cut approximately 2 1/2" long from the roll. Peel the back off the tape and place on the backside of **Face Fixture**, directly above the **Iron Sole Clamps**. Make sure tape is pressed on evenly by rubbing with a hard object, such as a coin.
3. Keep a small amount of grease on the bottom end of the **Top Worm Screw** where it makes contact with the **Top Clamp**.
4. Occasionally apply grease to the **Top Worm Screw**.

Technical Assistance

Call 1-800-437-1314

Monday-Friday 8:00AM-5:00PM Eastern Time

Email: info@mitchellgolf.com

Getting Started: Operating Instructions

Club Head Registration & Clamping

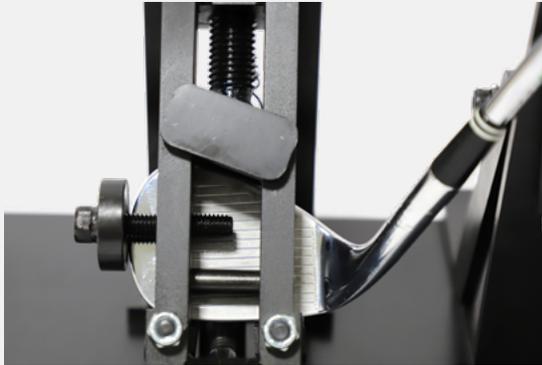


illustration 1



illustration 2



illustration 3

STEP 1

Push the **Loff/Lie Gauge Assembly** to the back of the machine to allow room to insert the club head.

STEP 2

Loosen the **Top Worm Screw** that adjusts the **Top Iron Clamp** that holds the iron head in place.

STEP 3

Insert club head into back of **Face Fixture**, setting the club sole on the two **Iron Sole Clamps** and the toe of the club touching the **Toe Stop**. Adjust club head so the score lines are parallel to the Horizontal Dowel Pin that is in between the **Face Fixture** by adjusting the **Toe Stop** inward or outward. Make sure club head is flush against the back of the **Face Fixture** then tighten the **Top Worm Screw**. See illustrations 1 and 2.

STEP 4

If necessary use the **T-Wrench** to tighten the **Back Iron Clamp** against the back of the iron sole.

See illustration 3.

NOTE: Use the **Back Iron Clamp** only when the club face does not clamp flush against the **Face Fixture** or when the club head slips when bending. These conditions are caused by the sole design on only a few models of clubs.

Do not use the Back Iron Clamp on every iron. It will slow down your bending time and is not necessary to use on every club.

Measuring Loft/Lie Angles

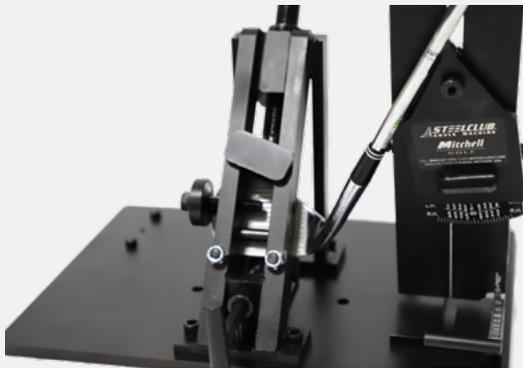


illustration 4

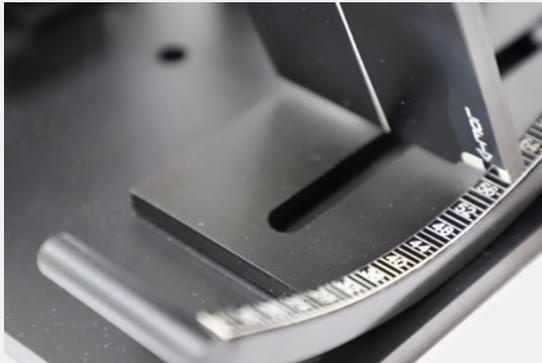


illustration 5



illustration 6

STEP 1

Slide the **Loft/Lie Angle Gauge Assembly** forward and allow the **Vertical Plate** to tilt on its vertical axis until the shaft is flush against it. Slide the **Lie Angle Gauge** up until it is touching the shaft. See illustration 4.

STEP 2

Read the loft on the **Loft Gauge** directly below the word "LOFT" as indicated at the lower right corner on the front of the **Vertical Plate**. See illustration 5.

STEP 3

Read the lie angle on the **Lie Angle Gauge**. See illustration 6.

Adjusting Loft/Lie Angles



illustration 7

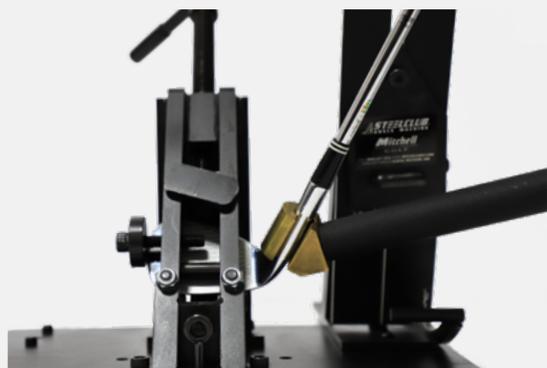


illustration 8



illustration 9

STEP 1

Slide **Loft/Lie Angle Gauge Assembly** to back of machine. Place adjustable bending bar on hosel as low as possible. Adjust bar to snug fit (finger tight) by turning knurled knob at end of bar. See illustration 7.

STEP 2

To bend hosel apply light pressure to bending bar in the direction of desired bend until it is seated firmly against hosel. Apply short, quick jolts of bending pressure to bend hosel. Remeasure club and rebend if necessary to desired angles.

STEP 3

To adjust lie angle bend up to make more upright and down to make flatter. The shaft should move in a plane parallel to the front of the machine. See illustration 8.

STEP 4

To adjust the loft angle bend back (up) to deloft the club and bend forward (down) to add loft to the club. The shaft should move in a plane parallel to the side of the machine. See illustration 9.

Convert To Left Hand



STEP 1

Remove the **Tension Bolt** from **Loft/Lie Angle Gauge Assembly**. Place entire assembly on left hand side of machine over the two dowel pins exactly like it was on the right hand side.

STEP 2

Replace the **Tension Bolt** by threading into the hole between the two dowel pins. Make sure it is loose enough to permit the **Loft/Lie Angle Gauge Assembly** to slide back and forth.

STEP 3

Remove the **Toe Stop** from the left hand side of the **Face Fixture** and screw it into the hole on the right hand side.

STEP 4

To measure and bend, repeat the same steps per instructions on pages 9-11. Read the lie for left hand, denoted by "L.H." on the **Lie Angle Gauge**. Read the loft on the **Loft Gauge**.

Please Visit Us At:
www.MitchellGolf.com

For Getting Started or Support Questions Please Email Us At:
info@mitchellgolf.com

